


## Activate Viewer License

Please follow the instructions below to get a NEPLAN-Viewer license code:

- 1) Select dialog from NEPLAN menu item: „**Options->License->Enter Viewer License Code**“ .

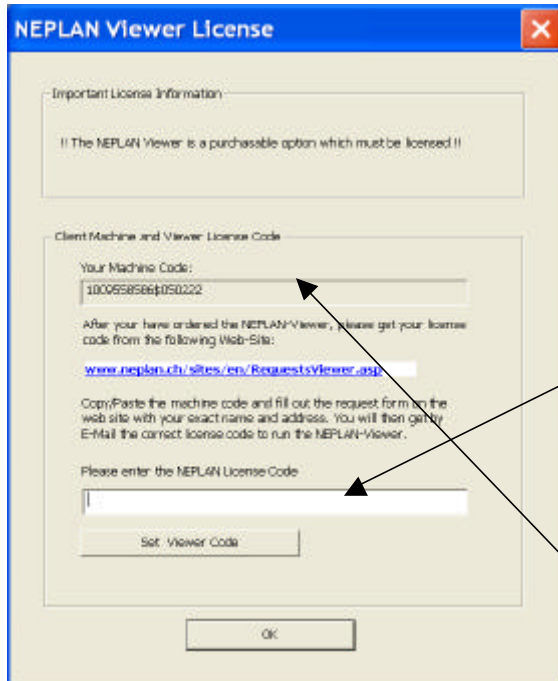


The dialog box is titled "NEPLAN Viewer License" and contains the following text and fields:

- Important License Information:  
!! The NEPLAN Viewer is a purchasable option which must be licensed !!
- Client Machine and Viewer License Code:  
Your Machine Code:  
  
After you have ordered the NEPLAN-Viewer, please get your license code from the following Web-Site:  
[www.neplan.ch/sites/en/RequestsViewer.asp](http://www.neplan.ch/sites/en/RequestsViewer.asp)  
Copy/Paste the machine code and fill out the request form on the web site with your exact name and address. You will then get an E-Mail the correct license code to run the NEPLAN-Viewer.
- Please enter the NEPLAN License Code:
- Buttons: "Set Viewer Code", "OK"

Viewer license code will be transmitted by e-mail

- 2) On the web site „[www.neplan.ch/sites/en/RequestsViewer.asp](http://www.neplan.ch/sites/en/RequestsViewer.asp)“ fill out the form below.

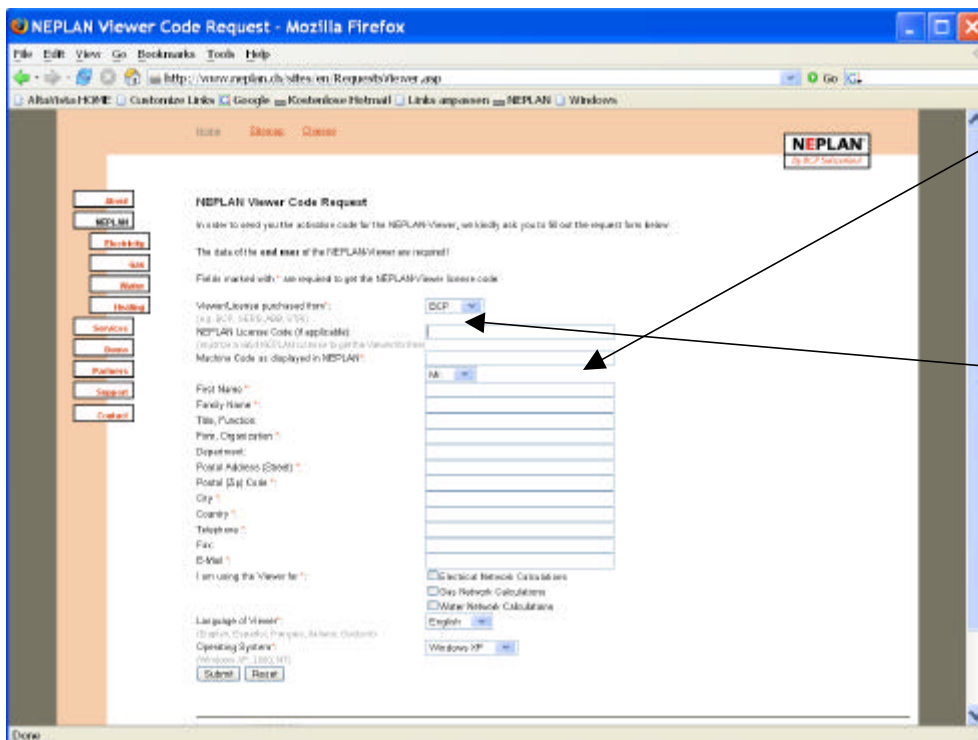

The screenshot shows a web browser window titled "NEPLAN Viewer Code Request - Mozilla Firefox" with the URL <http://www.neplan.ch/sites/en/RequestsViewer.asp>. The form is titled "NEPLAN Viewer Code Request" and includes the following fields and sections:

- Fields marked with \* are required to get the NEPLAN-Viewer license code.
- Viewer License purchased from: (e.g. PCF, S4/S5, A00, V75)
- NEPLAN License Code (if applicable):
- Machine Code as displayed in NEPLAN:
- Personal information fields: First Name, Family Name, Title, Function, Firm, Department, Department, Postal Address (Street), Postal (Zip) Code, City, Country, Telephone, Fax, E-Mail.
- I am using the Viewer for:  Structural Network Calculations,  Civil Network Calculations,  Water Network Calculations.
- Language: English
- Operating System: Windows XP
- Buttons: "Submit", "Reset"

Machine Code

Neplan License ID

- 3) Copy/Paste the machine code from the NEPLAN dialog above (see 1) ) into the form.
- 4) The NEPLAN-Viewer license is only free of charge, if you add a valid NEPLAN license ID into the form (see NEPLAN menu item: **Options->License->Enter Viewer License Code**“).

The image shows a dialog box titled "Enter Access Control String". It has a blue title bar with a close button (X) on the right. The dialog contains several input fields and checkboxes. The "License ID" field is highlighted with a red arrow and labeled "Neplan License ID". The "SubAddress" field contains the value "12" and the "HL-Index" field contains "0". The "Access Control String" field contains a long alphanumeric string: "wJNMVHzZdDU9MtgHstgKC8Tdr5xB<gcl9a>7". Below the input fields, there are three checkboxes: "Confirm Server Use" (checked), "Restart as DEMO" (unchecked), and "Restart as VIEWER" (unchecked). At the bottom of the dialog, there are two buttons: "OK" and "Cancel".

- 5) If the machine code and the license ID are correct, then you will get within the next days by E-Mail the Viewer license code. Please copy that code into the "**NEPLAN Viewer License**" dialog (see above).